

## **AUTO TENT (MP9548) USER GUIDE**



**Please read this user guide before attempting to set up your Auto Tent.  
Follow the user guide carefully and keep for future reference.**

**A copy of the user guide is also available on our website  
[www.maypoleltd.com](http://www.maypoleltd.com)**

## **AUTO TENT (MP9548) USER GUIDE**

### **WARNING – GENERAL SAFETY**

- Not to be used in strong winds and extreme weather conditions.

### **CARE OF YOUR AUTO TENT**

- Allow material to dry completely before storing in the storage bag provided.
- Remove dirt with a soft sponge and warm water. DO NOT use detergent.
- DO NOT expose to sparks, flames or other sources of ignition.
- NOTE – during certain conditions moisture may be visible on the inside of the material. This is the natural build up of condensation and should not be mistaken for leaking.

### **CONTENTS**

Auto Tent x 1

Inner Tent x 1

Steel Pegs x 8

Guylines x 4

Carry Bag x 1

### **BEFORE USE**

Choose a clear site that is flat. Remove any sharp objects from the pitching area which could be dangerous or potentially damage the fabric.


## AUTO TENT (MP9548) USER GUIDE

### PITCHING INSTRUCTIONS

Remove the Auto Tent from the carry bag and place flat on the ground with the centre hub facing upwards.



Lock the hinges at both points on each leg as per the diagram below:

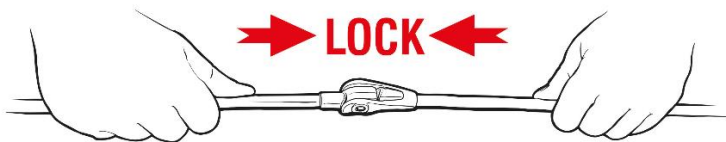

Pull up from the central hub until the tent is fully open. Gently push down on the central hub to lock the tent in shape.



## AUTO TENT (MP9548) USER GUIDE

Insert each leg into each corner plastic eyelet.



Once you have selected a suitable location to pitch your Auto Tent; peg down each corner. Ensure the tent is taut when pegging so it forms the correct shape.




Both the rear and front door can be zipped closed or rolled and held by toggles.

## AUTO TENT (MP9548) USER GUIDE


### PACKING AWAY YOUR AUTO TENT

Remove all pegs from each corner.

Make sure all hinges on each leg are unlocked.

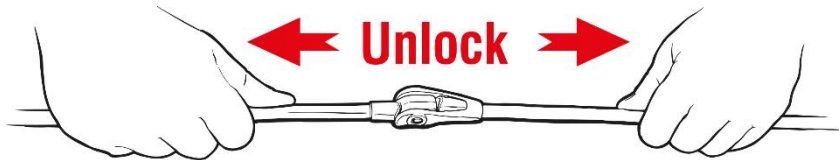

Holding the tent from the central hub; gently push points A & B against each other – this will unlock the frame. PLEASE DO NOT APPLY EXCESS FORCE AND THIS MAY CAUSE DAMAGE TO THE FRAME.

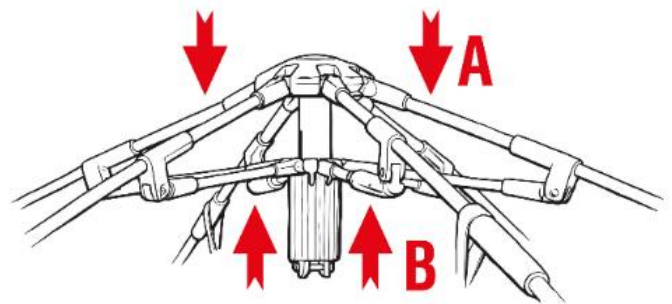

Fold each leg into the middle central hub ensuring it is as compact as possible to re-pack into the bag. NOTE – FOR THE LEGS TO FOLD ALL HINGES MUST BE IN THE UN-LOCKED POSITION. DO NOT APPLY EXCESS FORCE AND THIS MAY CAUSE DAMAGE TO THE FRAME.

*S. J. O'Leary*

Technical Manager Maypole Ltd Oct 2021

Email: [sales@maypoleltd.co.uk](mailto:sales@maypoleltd.co.uk)

Web: [www.maypoleltd.com](http://www.maypoleltd.com)