



Please read this user guide before attempting to set up your Air Driveaway Awning.

Follow the user guide carefully and keep for future reference.

A copy of the user guide is also available on our website

www.maypoleltd.com



WARNING – GENERAL SAFETY

- Not to be used in strong winds and extreme weather conditions.
- If using stepladders or a platform to set up the driveaway awning you will be working at height & should carefully follow the stepladder / platform manufacturer's safety instructions. You should not attempt to set up this Driveaway Awning from the ladder but only to use the ladder if required to assist people on the ground.
- DO NOT drive with this awning attached to your vehicle.

CARE OF YOUR AIR DRIVEAWAY AWNING

- Allow material to dry completely before storing in the storage bag provided.
- Remove dirt with a soft sponge and warm water. DO NOT use detergent.
- DO NOT expose to sparks, flames or other sources of ignition.
- NOTE during certain conditions moisture maybe visible on the inside of the material. This is the natural build up of condensation and should not be mistaken for leaking.

CONTENTS

Driveaway awning x 1

Hand pump x 1

Steel pegs x 36

Guy ropes x 14

Carry bag x 1

BEFORE USE

Choose a clear site that is flat. Remove any sharp objects from the pitching area which could be dangerous or potentially damage the fabric or puncture the air tubes.

NOTE – this Air Driveaway Awning is suitable for vehicles with an awning channel height range of 180cm – 210cm.

NOTE – either a 4mm or 6mm awning channel is required to fit this Air Driveaway Awning to your vehicle.



PITCHING INSTRUCTIONS

Remove the Awning from the carry bag and place flat on the ground. Ensure the dual beading faces the vehicle.

The awning has a 4mm & 6mm dual beading sewn into it. Choose the correct beading size for your awning channel and slide it into the awning channel on your vehicle.



Locate the 3 air valves below found on the air tubes on the right hand side of the awning. Unscrew the top cap of all 3 air valves.





Connect the large adaptor to the hand pump:



Insert the adaptor into the top cap on an air valve:



Inflate the air beam to approx 6-7 PSI. Once inflated; remove the adaptor from the valve and securely tighten the top cap. Repeat for the remaining 2 air beams.

WARNING: WHEN INFLATING; DO NOT EXCEED A PRESSURE OF OVER 7 PSI. IN STRONG SUNLIGHT & IN HOT TEMPERATURES REDUCE THE PRESSURE TO 4-5 PSI.

Pull the awning to a veritcal position from the 2 front guy ropes. Loosely peg down the guy ropes – the awning should now be able to support itself.

Peg down the tunnel side doors as close to the vehicle as possible.



Peg down all pegging points found at the base of the air tubes and side panels. Ensure the awning is tight when pegging so it forms the correct shape.





Once on position; peg down all of the guy ropes attached to the awning and fully tension using the adjusters provided.



It is recommended each peg is driven fully into the ground at an angle of 45 Degrees away from the pegging point.

To deflate the air tubes; unscrew the bottom cap on all valves for the air to be released. **WARNING – Be aware of sudden loud noise caused by air escaping when deflating.**

53.00e

Technical Manager Maypole Ltd October 2022

Email: sales@maypoleltd.co.uk Web: www.maypoleltd.com