



Please read this user guide before attempting to set up your tent. Follow the user guide carefully and keep for future reference.

A copy of the user guide is also available on our website www.maypoleltd.com



WARNING – GENERAL SAFETY

Not to be used in strong winds and extreme weather conditions.

CARE OF YOUR TENT

- Allow material to dry completely before storing in the storage bag provided.
- Remove dirt with a soft sponge and warm water. DO NOT use detergent.
- DO NOT expose to sparks, flames or other sources of ignition.
- NOTE during certain conditions moisture maybe visible on the inside of the material. This is the natural build up of condensation and should not be mistaken for leaking.

CONTENTS

Tent x 1

Fibreglass poles x 4

Guy ropes x 12

Steel pegs x 29

2 Berth inner tent x 1

Carry bag x 1

BEFORE USE

Choose a clear site that is flat. Remove any sharp objects from the pitching area which could be dangerous or potentially damage the fabric.



PITCHING INSTRUCTIONS

Recommended 2 person pitch.

Remove the tent from the carry bag and place flat on the ground.

Pre-assemble the 4 fibreglass poles.

Insert each fibreglass roof pole into each black roof sleeve.



Insert the metal pin ring found at the base of the tent into the bottom of the fibreglass pole. Repeat on the opposite side of the tent so the fibreglass pole is fully tensioned. Repeat for all 4 fibreglass poles to achieve the below arch shapes.







Attach the tent to each fibreglass pole with the plastic clips.



Ensure the sizing strap at the front of the tent is fully tensioned to achieve the correct size and shape.

Once in position peg down all corners and sides.

Peg down the guy ropes and fully tension with the adjusters provided.



It is recommended each peg is driven fully into the ground at an angle of 45 Degrees away from the pegging point.

53.00e

Technical Manager Maypole Ltd Oct 2022

Email: sales@maypoleltd.co.uk Web: www.maypoleltd.com