



Please read this user guide before attempting to set up your storage tent. Follow the user guide carefully and keep for future reference.
A copy of the user guide is also available on our website www.maypoleltd.com



WARNING - GENERAL SAFETY

• Not to be used in strong winds and extreme weather conditions.

CARE OF YOUR STORAGE TENT

- Allow material to dry completely before storing in the storage bag provided.
- Remove dirt with a soft sponge and warm water. DO NOT use detergent.
- DO NOT expose to sparks, flames or other sources of ignition.
- NOTE during certain conditions moisture maybe visible on the inside of the material. This is the natural build up of condensation and should not be mistaken for leaking.

CONTENTS

Storage tent x 1

Fibreglass poles x 2

Steel pegs x 12

Guy ropes x 4

Carry bag x 1

BEFORE USE

Choose a clear site that is flat. Remove any sharp objects from the pitching area which could be dangerous or potentially damage the fabric. **Note - when storing bikes it is recommended to use a stand to support the bikes.**



PITCHING INSTRUCTIONS

Remove the storage tent from the carry bag and place on the ground.

Pre-assemble both fibreglass poles.

From one side; insert a fibreglass pole through the sleeve and into the sleeve on the opposite side:



Repeat with the second fibreglass pole so they cross at the top. Secure the 2 poles together at a central point using the tie provided:





Insert a metal pin found at the base of the tent into the bottom of each fibreglass pole:



Pre-tie a guy rope onto all 4 corner attachment points.

Once in position; peg all 4 corner fibreglass poles and middle pegging points:







Peg down all 4 corner guy ropes.

It is recommended each peg is fully driven into the ground at an angle of 45 degrees away from the pegging point. Tension each guy rope using the guy adjusters:



sa Ole

Technical Manager Maypole Ltd Nov 2023 Email: sales@maypoleltd.co.uk V

Web: www.maypoleltd.com