



MP 2015L - BARREL LOCK & KEY SET FOR KNOTT AVONRIDE TRAILER COUPLINGS



Fig. A



Fig. B



Fig. C

These instructions include fitting a lock to a coupling head supplied without one and also the replacement of an existing lock.

Operate the safety latch and then lift the handle to expose the latch pin. Block the handle in the raised position See Fig. A

Using a punch, drift out the pin shown in Fig. A allowing the Safety latch (lock housing) and spring to be lifted out. See Fig. B

If the lock housing is not currently fitted with a lock remove the spring for re-use. Remove the washers and the plastic blanking plug and discard.

If the lock housing has a lock fitted remove the spring, the centre screw, washer and actuator lever. See Fig. C

Remove the lock barrel ring nut and the old lock barrel.

Fit the new lock barrel with the plastic cover, insert the lock into the lock housing and secure with the new ring nut.

Fit the actuator lever with washer and screw, do not overtighten. The actuator is shown in the unlocked position in Fig. C and should be re-fitted in this position.

Fit the spring using grease to hold it in place.

Place the safety latch (lock housing) into position in the top of the coupling body, line up the pivot hole and carefully drift in the new pin.

Check that all parts are secure, that the safety latch moves freely and secures the handle.