


MP9579 'EASY LOAD' CAMPING CART - USER GUIDE

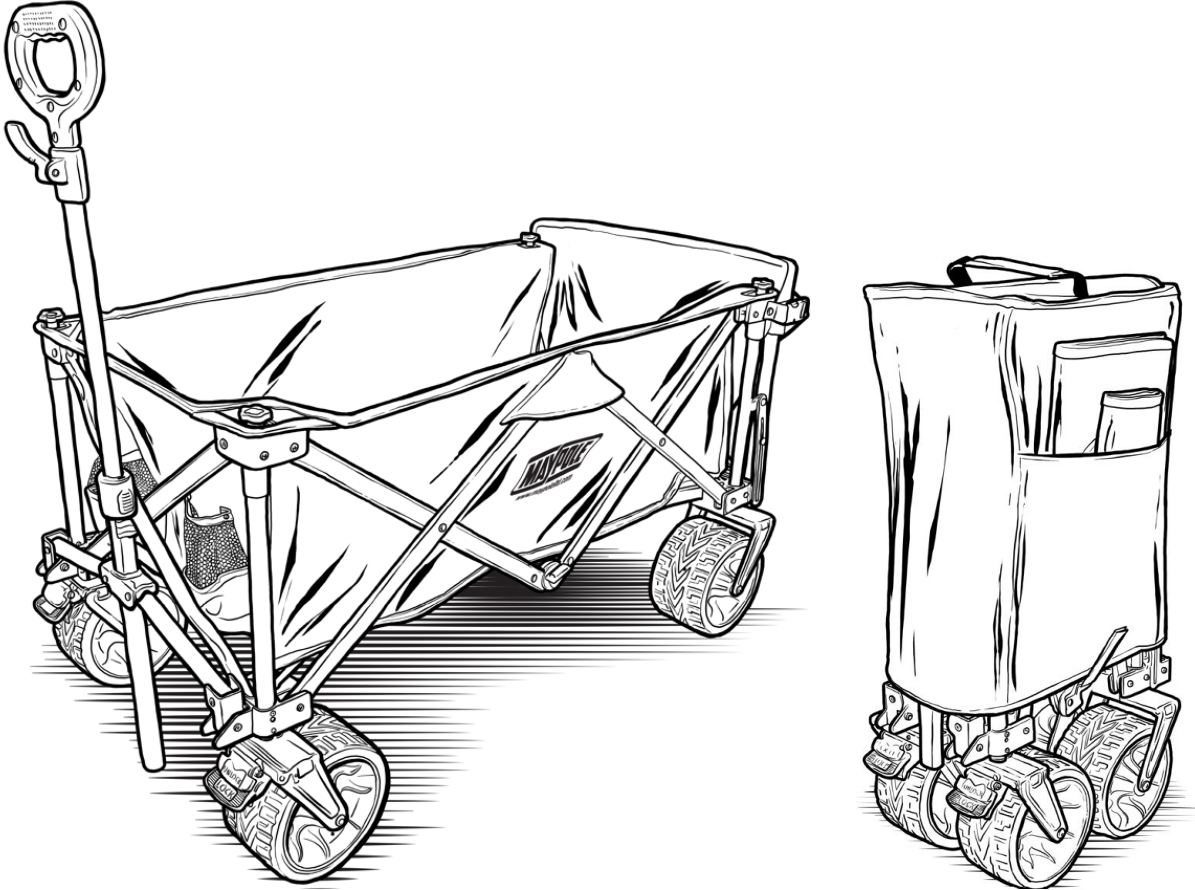

Please read & follow this user guide & all safety instructions carefully when using this product.

Keep the user guide for future reference. When passing the product onto others be sure to include all documentation. The user guide is also available on our website: www.maypoleltd.com

MP9579 'EASY LOAD' CAMPING CART - USER GUIDE

GENERAL SAFETY

- Check your cart before use. Do not use if any part of the product is damaged, worn or missing.
- Children should only use this product under adult supervision.
- Overloading or incorrect folding may cause product damage or unsafe use. Always adhere to the user guide.
- **DO NOT transport children or animals in the cart.**
- Make sure the cart is completely open when in use.
- Be careful of trapping hands or fingers on hinges when folding & un-folding the cart.

CARE OF YOUR PRODUCT

- Allow material to dry completely before folding & storing.
- Remove dirt with a soft sponge and warm water. DO NOT use detergent.
- DO NOT expose to sparks, flames or other sources of ignition.
- Clean the wheels regularly ensuring all dirt and mud is removed.
- Periodically lubricate the wheels & frame hinges with light oil to ensure they keep moving freely.

CONTENTS

- Steel Frame
- 600D Oxford fabric
- Solid base
- Detachable side pocket
- Storage Cover
- 4 thumb wheels

SPECIFICATION

Frame	Steel
Material	600D Oxford Polyester
Product Weight	9.5kg
Weight Capacity	80kg
Folded Dimensions	H x 74cm L x 40cm D x 31cm
Un-folded Dimensions	H x 57cm L x 97cm D x 55cm

MP9579 'EASY LOAD' CAMPING CART - USER GUIDE

UN-FOLDING INSTRUCTIONS

Remove the cart from the storage cover and place on a flat ground.

Pull open from the front & back of the cart to start un-folding. Be careful of trapping hands or fingers on hinges when un-folding. Push down at the middle of the base of the cart to fully un-fold:



Insert the solid base into the bottom of the cart.

To pull the cart; unclip the telescopic handle at the rear of the cart. The telescopic handle can be extended by releasing the red lock on the handle:



MP9579 'EASY LOAD' CAMPING CART - USER GUIDE

The front of the cart can fold down to transport longer items. Un-clip both buckles found at the front of the cart to allow the front to fold down. **WARNING – do not overload the fold down front – excessive weight could damage the front or cause the cart to topple. DO NOT stand or sit on the fold down front.**



To lock the rear wheels, push the foot pedal down to the 'lock position' on both wheels. Note – only the rear wheels lock:



MP9579 'EASY LOAD' CAMPING CART - USER GUIDE

FOLDING INSTRUCTIONS

Ensure the telescopic handle is reduced to its minimum size and secured in the clip provided.

Ensure the front is folded into the upright position and secured with the buckles provided.

Remove the solid base.

Before folding the cart; check all hinges are free of any excess material which may get caught or prevent it from folding. Be careful of trapping hands or fingers on hinges when folding the cart.

From the middle of the base of the cart; pull the loop to start folding the cart. Push from both the front & back of the cart to ensure it is as compact as possible:




Slide the storage cover over the cart and secure with the velcro straps provided. Store the solid base in storage cover pocket:



MP9579 'EASY LOAD' CAMPING CART - USER GUIDE

It is recommended the cover is cleaned periodically. To remove the cover, un-screw the 4 corner thumbwheels and remove the cover. To replace the cover; attached all for corners of the cover onto the corner screws and secure tight with the thumb wheels.

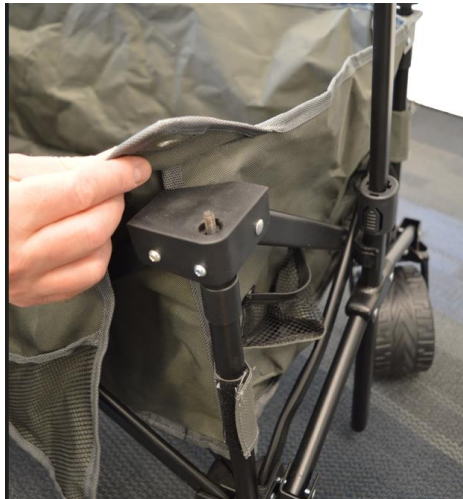

SJC

Technical Manager Maypole Ltd Jan 2025

Email: sales@maypoleltd.co.uk

Web: www.maypoleltd.com

Maypole Ltd, 162 Clapgate Lane, Birmingham, B32 3DE, UK

Maypole Touring Ireland Ltd, 40 Mespil Road, Dublin 4, D04 C2N4, Ireland