


NOTICE DE MONTAGE

ASSEMBLY INSTRUCTIONS

SPSY

A

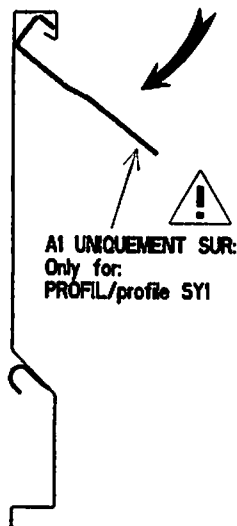


B

x1	x1	x1
HM 8x25	Ø 8x24	Ø 10x20

x1	x1
Ø 8x24	HM 8 FR


Bt. PROFIL/profile SY1

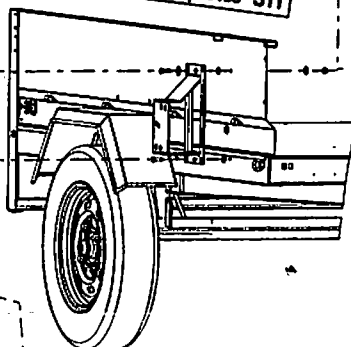

	x1	HM 8x25
	x1	Ø 10x20
	x1	Ø 8x24
	x1	HM 8 FR

B2: RIDELLE AVEC PAROI INTERNE


Side panel with internal wall

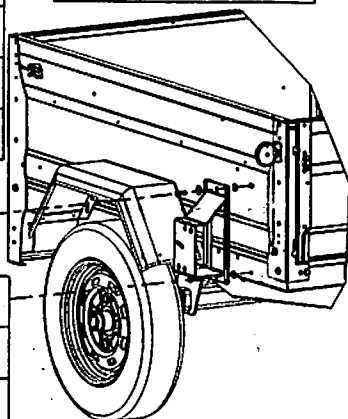

	x1	HM 8x25
	x1	Ø 10x20
	x1	Ø 8x24
	x1	HM 8 FR

B3: RIDELLE SANS PAROI INTERNE

Side panel without internal wall

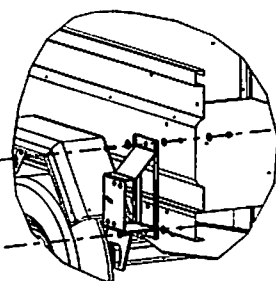

	x1	HM 8x25
	x1	Ø 10x20
	x1	Ø 8x24
	x1	HM 8 FR


B5



INTRODUCTION



CLIPPAGE




AJUST-RETIEN

C

ERDE 153 A/to 213
DAXARA 158 A/to 218

ERDE 233/234
DAXARA 238/239

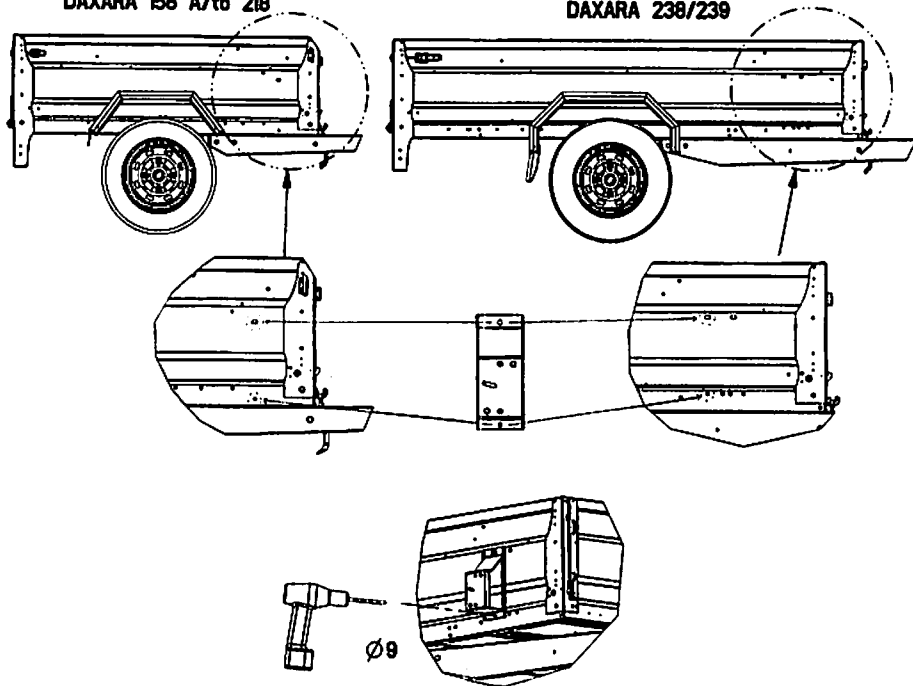

C1 SI TROU MANQUANT DANS LE FOND, PLACER LE SUPPORT DANS LA RIDELLE ET PERCER
If the hole is missing in the floor, assemble support on upper hole and drill

D

D1: ROUE/wheel Ø15x4

D2: ROUE/wheel Ø130x4

x2	x2	x2
HM 10x30	Ø10	Ø10

D3:
OU
/or

x2	x2	x2
HM 12x30	Ø12	Ø12

