


## **DUAL BEADING DRIVEAWAY CONNECTION KIT (6MM TO 4MM/ 6MM) MP9567 USER GUIDE**

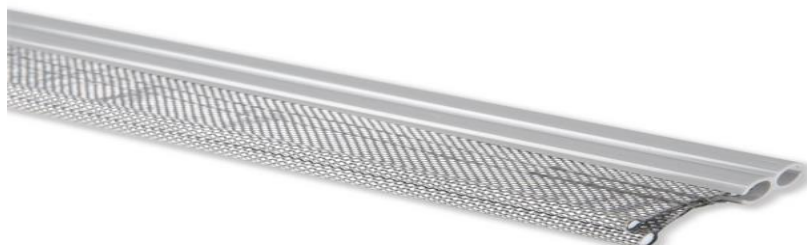

**Please read this user guide before attempting to fit your connection kit.  
Follow the user guide carefully and keep for future reference.**

**A copy of the user guide is also available on our website  
[www.maypoleltd.com](http://www.maypoleltd.com)**

### **CARE OF YOUR PRODUCT**

Allow material to dry completely before storing in the storage bag provided.

Remove dirt with a soft sponge and warm water. DO NOT use detergent.

DO NOT expose to sparks, flames or other sources of ignition.

### **CONTENTS**

3m x 4mm/6mm Kador Strip

3 x 1m figure of 8 extrusions

Storage bag

### **FITTING GUIDE**

Insert the kador strip into the awning channel on your vehicle. Ensure the correct size beading is inserted (either 6mm or 4mm).

Thread the 3 x 1m figure of 8 extrusions onto the onto the kador strip.

Trim to fit your vehicle size if required.

You can now insert your awning to the figure of 8 extrusion.

Technical Manager Maypole Ltd Oct 2022

Email: [sales@maypoleltd.co.uk](mailto:sales@maypoleltd.co.uk)

Web: [www.maypoleltd.com](http://www.maypoleltd.com)