

‘ASHBOURNE’ AIR DOOR CANOPY (MP9583) - USER GUIDE



Please read & follow this user guide & all safety instructions carefully when using this product.

Keep the user guide for future reference. When passing the product onto others be sure to include all documentation. The user guide is also available on our website: www.maypoleltd.com

‘ASHBOURNE’ AIR DOOR CANOPY (MP9583) - USER GUIDE

GENERAL SAFETY

- Not to be used in strong winds and extreme weather conditions.
- If using stepladders or a platform to set up the Air Door Canopy you will be working at height & should carefully follow the stepladder / platform manufacturer's safety instructions. You should not attempt to set up this Air Door Canopy from the ladder but only to use the ladder if required to assist people on the ground.
- **DO NOT drive with this Air Door Canopy attached to your vehicle.**

CARE OF YOUR AIR DOOR CANOPY

- Allow material to dry completely before storing in the storage bag provided.
- Remove dirt with a soft sponge and warm water. DO NOT use detergent.
- DO NOT expose to sparks, flames or other sources of ignition.
- NOTE – during certain conditions moisture maybe visible on the inside of the material. This is the natural build up of condensation and should not be mistaken for leaking.

CONTENTS

Air Door Canopy x 1

Extendable steel corner roof poles x 2

Webbing Straps x 2

Steel Pegs x 4

Hand pump x 1

Carry Bag x 1

BEFORE USE

Choose a clear site that is flat. Remove any sharp objects from the pitching area which could be dangerous or potentially damage the fabric or puncture the air beams.

NOTE – this Air Door Canopy is suitable for vehicles with an awning channel height range of 235cm – 290cm.

NOTE –a 6mm awning channel is required to fit this Air Door Canopy to your vehicle.

‘ASHBOURNE’ AIR DOOR CANOPY (MP9583) - USER GUIDE

PITCHING INSTRUCTIONS

Remove the Canopy from the carry bag and place flat on the ground. Ensure the beading faces the vehicle.

The canopy has 6mm beading sewn into it; slide it into the top awning channel on your vehicle and position the canopy over the door.




Locate the air valve on the side of the canopy and unscrew the top cap.



Connect the large adaptor to the hand pump. Insert the adaptor into the top cap on the valve. Inflate the air beam to approx.6-7 PSI. Remove the adaptor from the valve and securely tighten the top cap. **WARNING: WHEN INFLATING; DO NOT EXCEED A PRESSURE OF OVER 7 PSI. IN STRONG SUNLIGHT & IN HOT TEMPERATURES REDUCE THE PRESSURE TO 4-5 PSI.**

‘ASHBOURNE’ AIR DOOR CANOPY (MP9583) - USER GUIDE


Once inflated and in position; slide the beading attached to the webbing straps into the bottom awning channel. Clip the buckle together and tension the webbing straps accordingly for a secure fit.

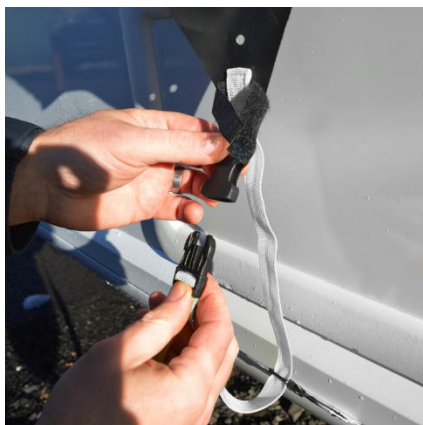

Tie off any excess straps in the sleeve provided.



If your vehicle does not have a bottom awning channel the webbing straps can be pegged into the ground through the eyelets provided. Tension the webbing straps accordingly for a secure fit. Tie off any excess straps in the sleeve provided.

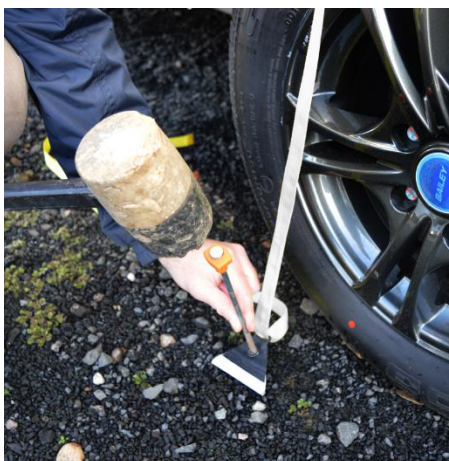

‘ASHBOURNE’ AIR DOOR CANOPY (MP9583) - USER GUIDE

Adjustable steel poles are provided to allow rain to drain off and provide extra shape and support in adverse weather conditions. Insert each extendable steel pole into both ends of the PVC pockets found in the corner of the canopy. Ensure both are fully tensioned.



Finally; peg down both webbing straps on each corner and fully tension.

It is recommended each peg is driven fully into the ground at an angle of 45 Degrees away from the pegging point.

To deflate - unscrew the bottom screw on the air valve. **WARNING – Be aware of sudden loud noise caused by air escaping when deflating.**

S. J. Cole

Technical Manager Maypole Ltd Nov 2024

Email: sales@maypoleltd.co.uk

Web: www.maypoleltd.com

Maypole Ltd, 162 Clapgate Lane, Birmingham, B32 3DE, UK

Maypole Touring Ireland Ltd, 40 Mespil Road, Dublin 4, D04 C2N4, Ireland