

LED HEADLAMP (300 LUMEN) USER GUIDE (MP4062)



Please read this operating manual fully and abide by all safety instructions when using this device.

Keep these instructions for future reference. When passing the device on to others be sure to also include all documentation. The instruction leaflet is also available on our website: www.maypoleltd.com

IMPORTANT SAFETY INSTRUCTIONS

- Fully charge the device before first use.
- Do not use the lamp in the immediate vicinity of inflammable materials or gases.
- Do not cover the product during operation.
- Only ever use this product in conjunction with the accessories supplied.
- This product is not to be used by children unsupervised.
- Refrain from directing the output of the lamp directly into your eyes.
- Thoroughly inspect the device and its accessories prior to each use. If any component is damaged, the product should not be used.
- This product contains no serviceable or replacement parts.

COMPONENTS



Box contains:


- 1 x LED Headlamp
- 1 x USB Cable

CHARGING

The device is charged directly by a USB cable supplied.


- Connect the micro USB plug into the charging socket (G).
- Connect the type A USB plug to a 5V 1A supply.
- The battery charging status can be confirmed by the illumination of a red LED light (C) on the front of the headlamp. Once the charging is complete the light will turn green.
- Fully charge the device at least once every three months to ensure the condition of the battery is maintained.

OPERATION

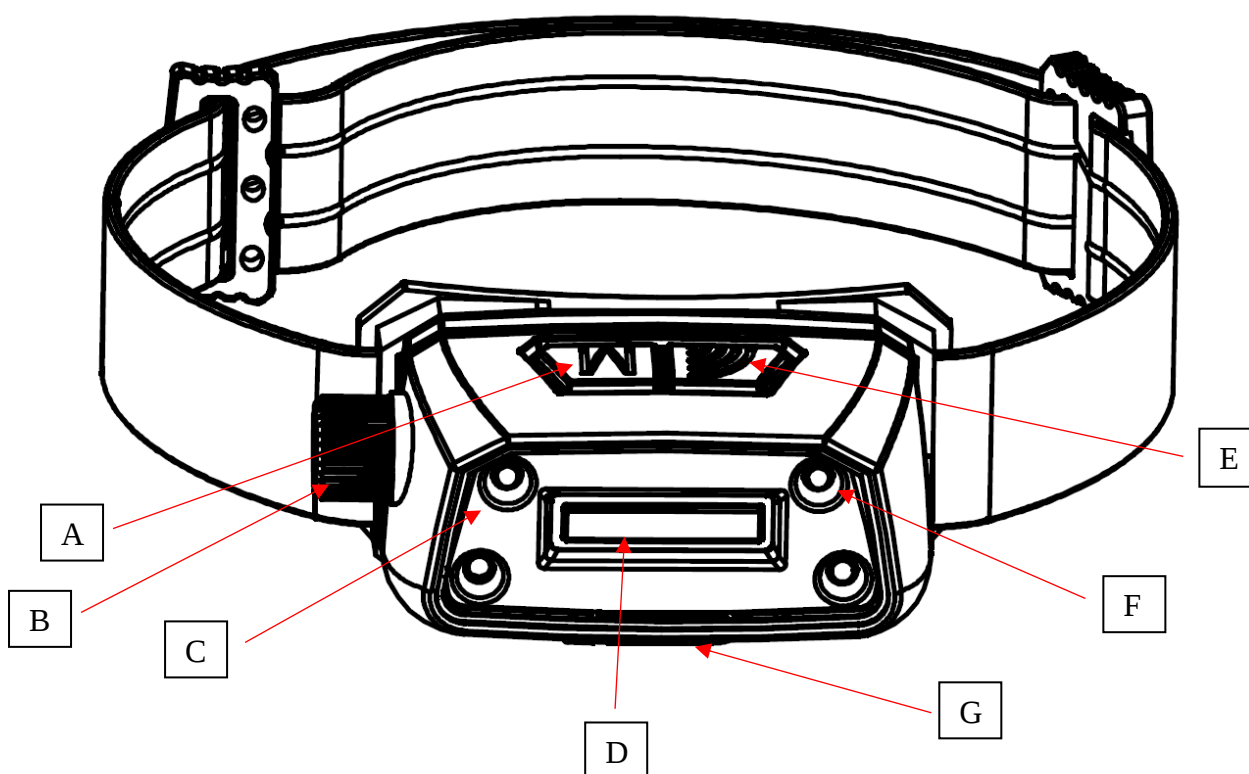

- A – Mode button. Select the desired colour temperature (2,700K, 4,500K, 6,500K) or SOS
- B – ON/OFF and Dimmer dial. Can be used to adjust the intensity of the headlamp from 40lm to 300lm.
- C – Charging LED indicator
- D – 300 Lumen 3W COB headlamp
- E – Motion sensor switch
- F – Motion sensor LED indicator. Blue LED indicates motion sensor is activated.
- G – USB charging socket

Tilt the bracket on the headlamp to a maximum of 60 Degrees.

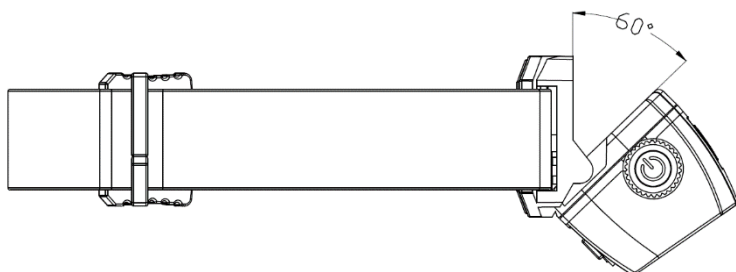

Motion sensor

With the light on; activate the motion sensor by pressing button E. When activated the motion sensor LED indicator (F) will be blue. Waving your hand up and down in front of the lamp at a distance of between 5 - 15cm will turn the light ON and OFF.

TECHNICAL SPECIFICATIONS

Part No	MP4062
Light output	40-300 Lumen
CRI	96+
Lithium ion battery	3.7V 1,400mAh
Charging period	Approx 3hrs
Usage period	300lm 3.5hrs, 125lm 7hrs, 40lm 14hrs
Colour temperature	2,700K, 4,500K, 6,500K
Charging input	5V DC 1A
IP Rating	IP67
IK Rating	IK07

ENVIRONMENTAL PROTECTION



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Declaration



This apparatus meets the requirements of:

EMC EN55015:2013+A1:2015; EN61547:2009; ENIEC61000-3-2:2019; EN61000-3-3:2013+A1:2019

LVD EN60598-1:2015+A1:2018; EN60598-2-4:2018; EN62493:2015

RoHS Directive 2011/65/EU and its subsequent amendments Directive (EU) 2015/863.

Technical Manager, Maypole Ltd, June 2021

Email: sales@maypoleltd.co.uk

Web: www.maypoleltd.com